

Contents of Package:

- DFE-538TX 10/100Fast Ethernet Adapter
- Quick Install Guide
- CD-ROM, which includes driver software

If any of the above items are missing, please contact your reseller.

Requirements:

- PowerPC-based Macintosh computer with free PCI slot
- Operating System 8.0 or higher


Installation Procedure:

1. Install the DFE-538TX
2. Install the Drivers
3. Configure the Network Services



Installing the DFE-538TX into the computer's PCI slot

- **Turn OFF** the computer
- **Insert** the DFE-538TX into an available PCI slot

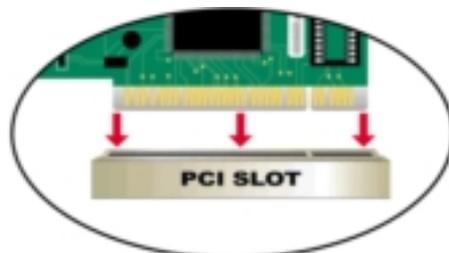


2

Installing the DFE-538TX Drivers


- **Turn ON** the computer
- **Insert** the CD-ROM into the Macintosh's CD-ROM drive



Double click on the CD-ROM icon on the desktop

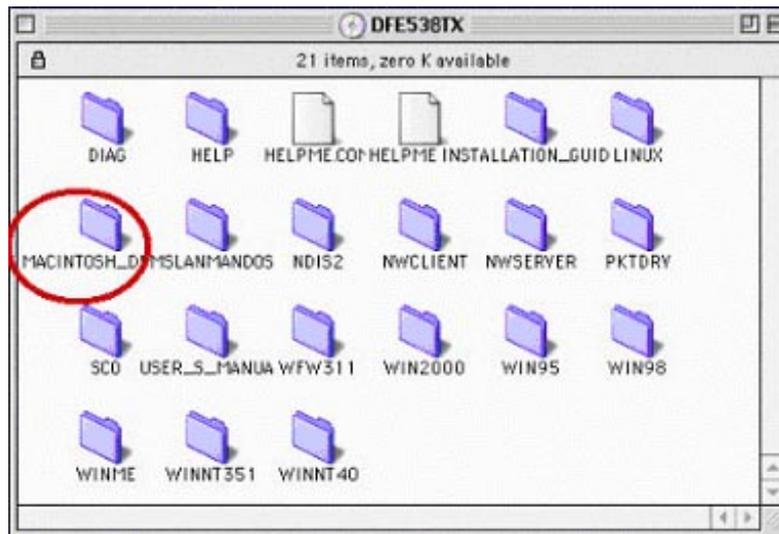

Double-click on the **Macintosh** folder.

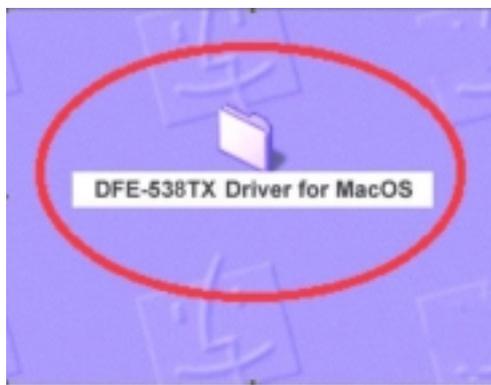

Copy folder “**DFE-538TX Driver for Mac OS**” to desktop and **Double-click** on the folder “**DFE-538TX Driver for MacOS**” when it appears on your desktop.



Double-click on the “**Installer**” icon.



Click “Install” to continue.




Click "OK" to restart the computer.
After the computer restarts, the driver is installed

3

Checking Installation of the DFE-538TX Drivers

Go to the **Apple Menu > Controls Panel > Extensions Manager**
Scroll down to find **DLKRTS**. Make sure that the box to the left is checked.

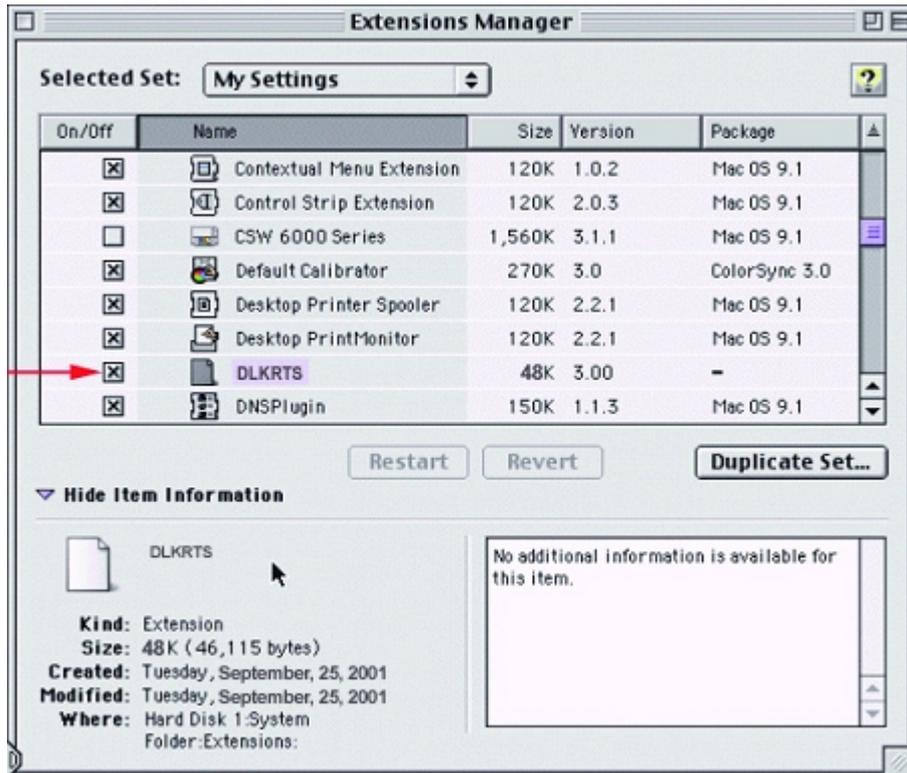

Before the adapter can be used, you will need to configure network services as shown in **Step 4**.

4

Configuring Network Services

1. Open the **Apple menu**.
2. Go to **Control Panels>AppleTalk** control panel.
3. Select **Ethernet** from the **Connect via:** list box.
4. Do **not** choose **DLKRTS Ethernet**. If you do not see it, go back to the beginning of this guide and install the drivers again.
5. When the installation is successful, and you have completed this step, choose “**Quit**” from the “**File**” menu.
6. **Click “Save”** when prompted to save the new settings.
7. Open the **Apple menu** again.
8. Go to **Control Panels>TCP/IP** control panel.
9. Select **Ethernet** from the **Connect via:** list box.
10. From the **Configure:** list box, choose “**Using DHCP Server**” if you are automatically assigned a “**Dynamic IP address.**” If you are not automatically assigned an IP address, choose “**Manual**” for a “**Static IP address.**”
11. Choose “**Quit**” from the “**File**” menu.
12. **Click “Save”** when prompted to save the new settings.

*Restart your computer one more time.
Your adapter is now ready to network with other computers.*

Technical Support

You can find the most recent software and user documentation on the **D-Link** website.

D-Link provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact **D-Link** technical support through our web site or by phone.

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week

D-Link Technical Support over the Internet:

<http://support.dlink.com>

D-Link[®]
Building Networks for People